




RUBBER - METAL SPARE PARTS









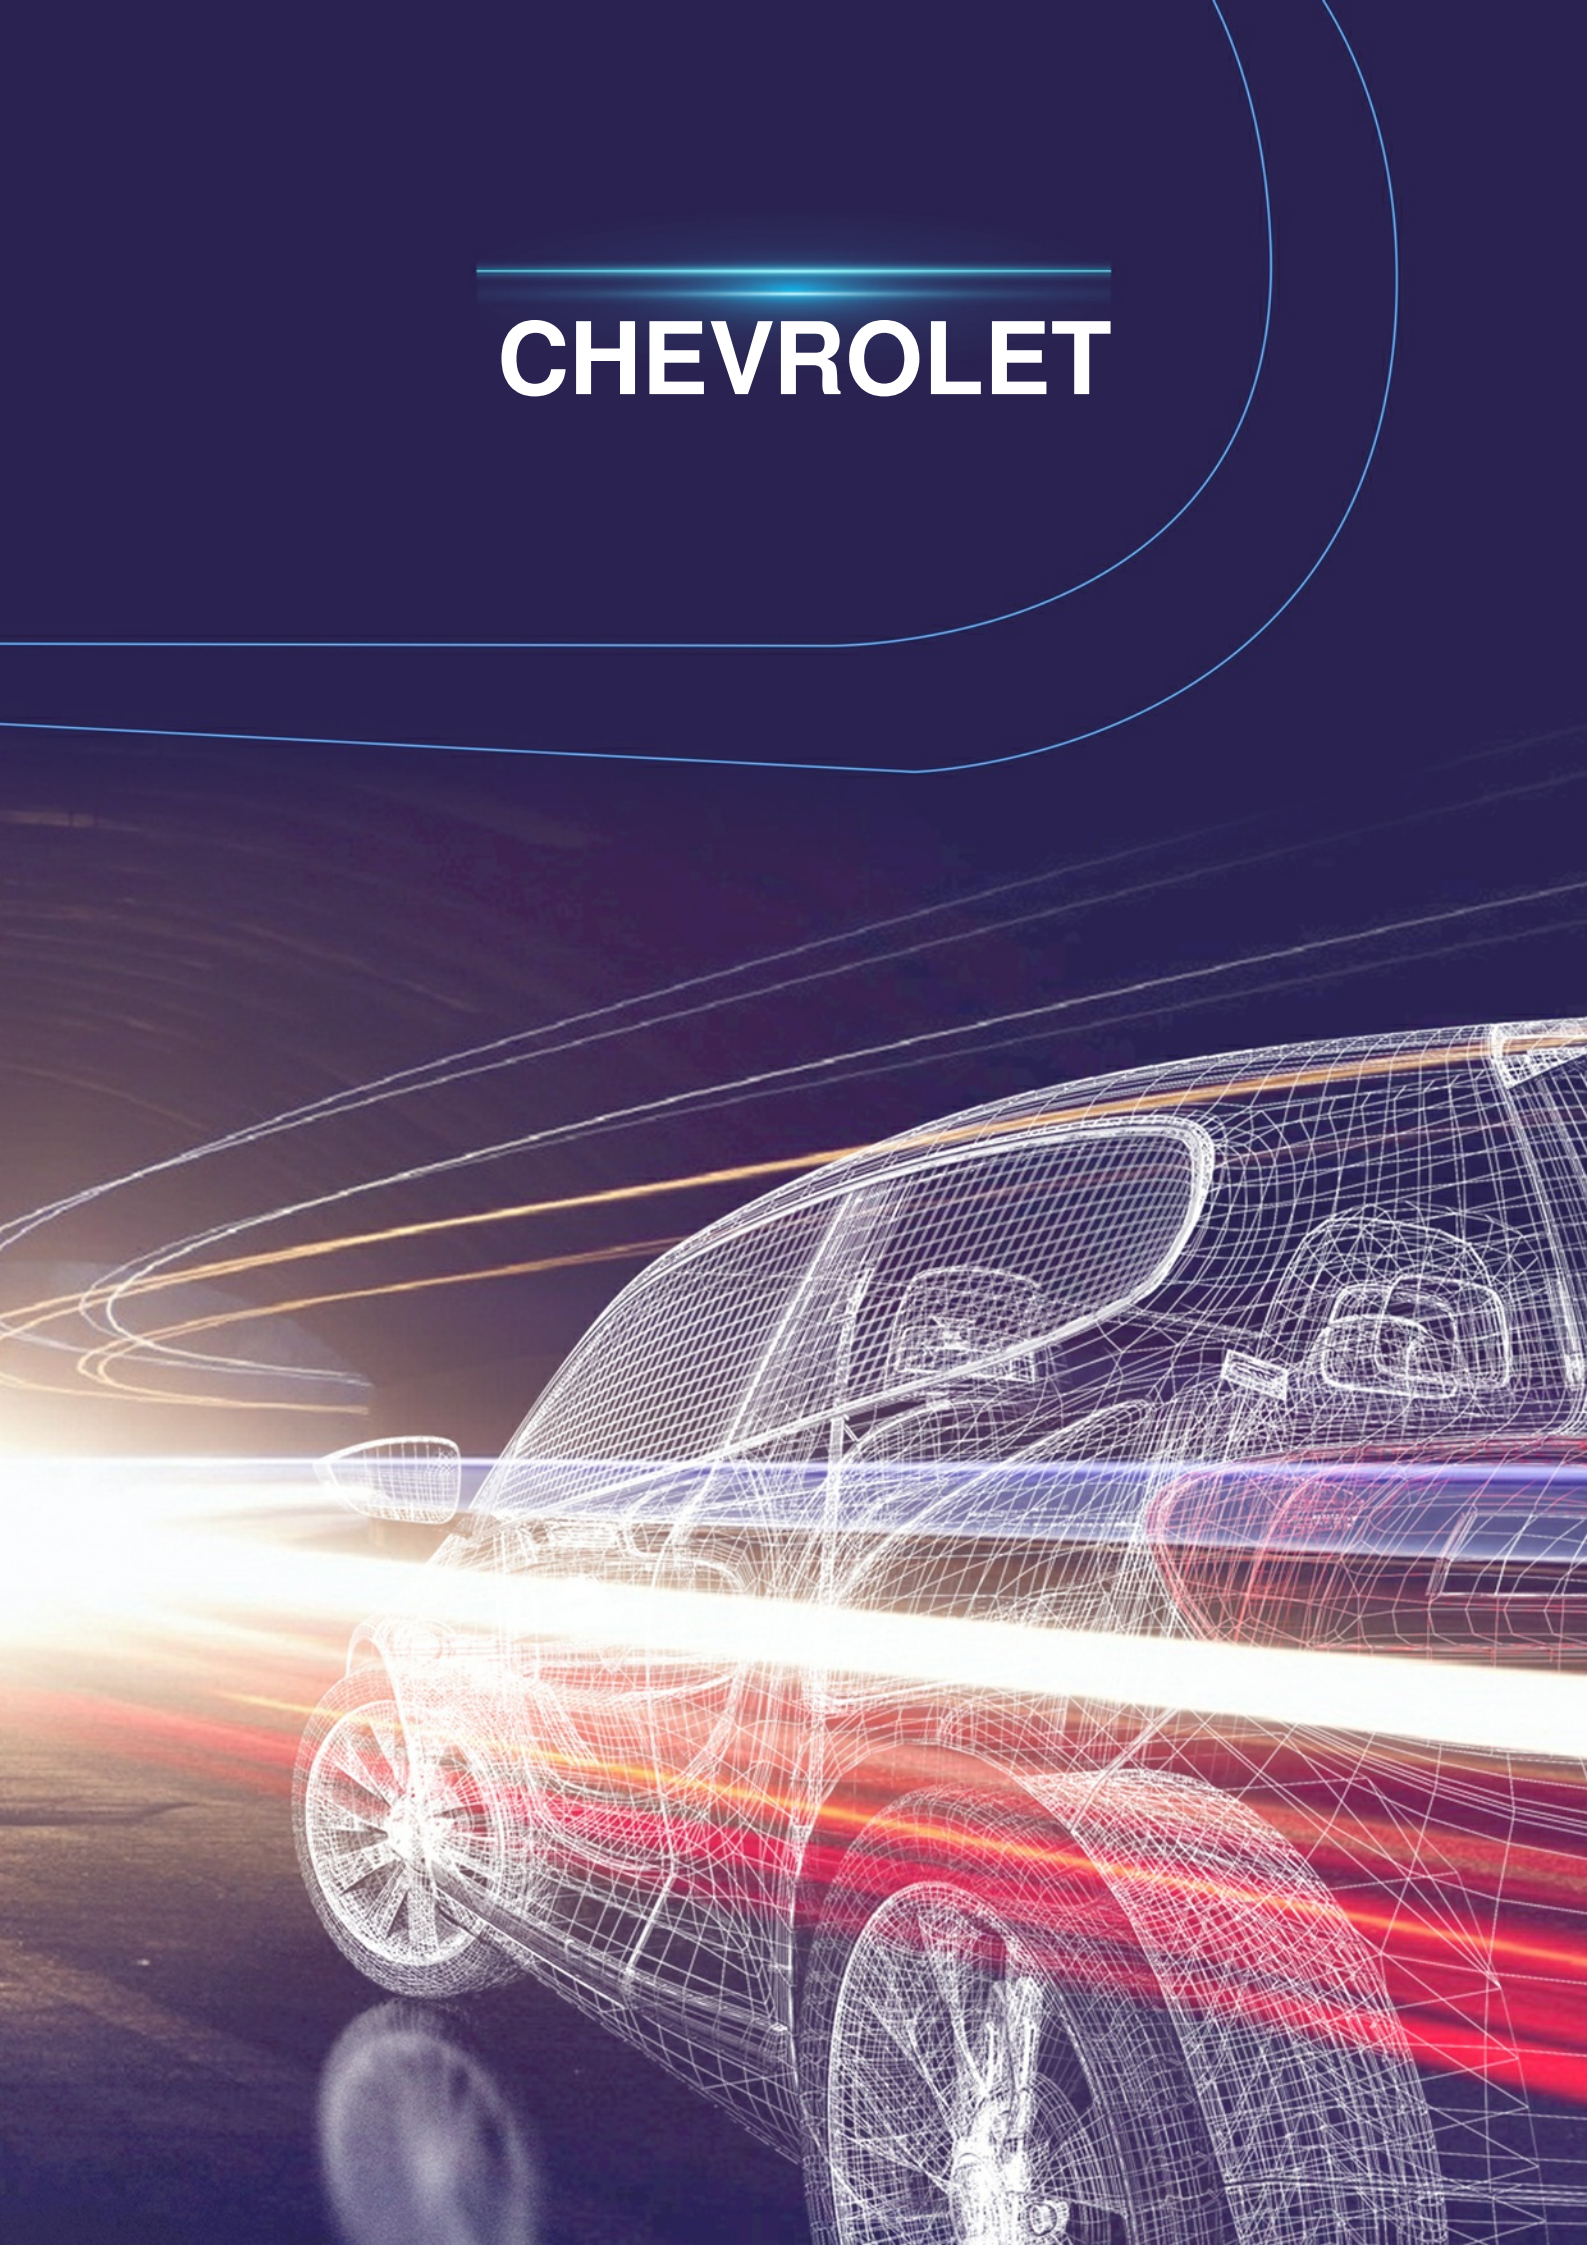











PRODUCT CATALOGUE











































www.rbr.com.tr





















CHEVROLET




















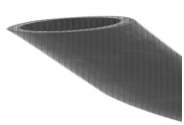






















<p>30001 96550232</p>  <p>Engine Mounting LACETTI, OPTRA, NUBIRA</p>	<p>30002 96550235</p>  <p>Engine Mounting LACETTI, NUBIRA</p>	<p>30003 96550266</p>  <p>Engine Mounting LACETTI</p>	<p>30004 96535429</p>  <p>Engine Mounting KALOS</p>
<p>30005 96535499</p>  <p>Engine Mounting KALOS</p>	<p>30006 96535402</p>  <p>Gearbox Mounting KALOS</p>	<p>30007 13248607</p>  <p>Engine Mounting CRUZE, ORLANDO</p>	<p>30008 13248630</p>  <p>Engine Mounting CRUZE</p>
<p>30009 13248544</p>  <p>Engine Mounting CRUZE</p>	<p>30010 13248607 684224</p>  <p>Engine Mounting CRUZE</p>	<p>30012 96626772</p>  <p>Engine Mounting CAPTIVA</p>	<p>30013 25959117</p>  <p>Gearbox Mounting CAPTIVA</p>
<p>30014 20781756</p>  <p>Shaft Mounting CAPTIVA</p>	<p>30016 96549921</p>  <p>Shock Absorber Mounting LACETTI, OPTRA, NUBIRA</p>	<p>30017 96653239 90535011</p>  <p>Shock Absorber Mounting KALOS</p>	<p>30018 96653239 90535011</p>  <p>Shock Absorber Mounting With Bearing KALOS</p>
<p>30019 96456713</p>  <p>Shock Absorber Mounting KALOS, AVEO</p>	<p>30020 96457360</p>  <p>Shock Absorber Mounting LACETTI, NUBIRA</p>	<p>30021 13505131</p>  <p>Shock Absorber Mounting CRUZE</p>	<p>30022 96535010</p>  <p>Shock Absorber Bearing KALOS</p>

<p>30023</p> <p>94535236 90374844</p>  <p>Shock Absorber Bearing LACETTI, NUBIRA</p>	<p>30024</p> <p>96456715</p>  <p>Shock Absorber Rubber KALOS, AVEO</p>	<p>30025</p> <p>95015324</p>  <p>Shock Absorber Mounting Modified KALOS, AVEO, SPARK, MATIZ</p>	<p>30026</p> <p>95015324 96535010</p>  <p>Shock Absorber Mounting And Bearing (Set) KALOS, AVEO, SPARK, MATIZ</p>
<p>30027</p> <p>95227628</p>  <p>Shock Absorber Mounting AVEO</p>	<p>30028</p> <p>96391553 93743422</p>  <p>Axle Boot (inner) KALOS, AVEO, LACETTI, CAPTIVA,</p>	<p>30029</p> <p>96489856 96243579</p>  <p>Axle Boot (inner) LACETTI, NUBIRA</p>	<p>30030</p> <p>96245309</p>  <p>Axle Shaft Boot (Outer) KALOS, AVEO</p>
<p>30031</p> <p>96245310 96273574</p>  <p>Axle Boot (inner) KALOS, AVEO, SPARK, MATIZ</p>	<p>30032</p> <p>13318002</p>  <p>Axle Shaft Boot CRUZE</p>	<p>30033</p> <p>13318004</p>  <p>Axle Shaft Boot CRUZE</p>	<p>30037</p> <p>93742565</p>  <p>Bellow Steering KALOS, AVEO</p>
<p>30039</p> <p>93742552</p>  <p>Bellow Steering LACETTI, NUBIRA</p>	<p>30040</p> <p>96839848 96839848 96474040</p>  <p>Stablizer Rubber LACETTI, OPTRA</p>	<p>30041</p> <p>96870461 96653351 96435295 96804650</p>  <p>Stablizer Rubber KALOS, AVEO</p>	<p>30042</p> <p>96434543 96941966 96933805</p>  <p>Stablizer Rubber LACETTI, OPTRA, NUBIRA</p>
<p>30043</p> <p>96322618</p>  <p>Stablizer Rubber SPARK, MATIZ</p>	<p>30044</p> <p>13346488</p>  <p>Stablizer Rubber CRUZE</p>	<p>30045</p> <p>96626251 96810751</p>  <p>Stablizer Rubber CAPTIVA</p>	<p>30046</p> <p>96810752</p>  <p>Stablizer Rubber CAPTIVA</p>

<p>30047 96535087</p>  <p>Silent Arm Bush KALOS, AVEO</p>	<p>30048 96535088 96653381 95479763</p>  <p>Silent Arm Bush KALOS, AVEO</p>	<p>30049 96431044 96261107</p>  <p>Silent Arm Bush LACETTI, NUBIRA</p>	<p>30050 96378346</p>  <p>Silent Arm Bush LACETTI, NUBIRA</p>
<p>30053 96550057</p>  <p>Suspension Bush LACETTI</p>	<p>30054 96550057</p>  <p>Stabilizer Link LACETTI</p>	<p>30055 96550064</p>  <p>Suspension Bush LACETTI</p>	<p>30056 96535146</p>  <p>Suspension Bush KALOS, MATIZ</p>
<p>30057 96809676</p>  <p>Silent Arm Bush CAPTIVA</p>	<p>30058 96439858</p>  <p>Air Filter Hose KALOS, AVEO</p>	<p>30059 96536714</p>  <p>Air Filter Hose KALOS, AVEO, AVEO</p>	<p>30060 96553533</p>  <p>Air Filter Hose LACETTI</p>
<p>30061 96328721</p>  <p>Air Filter Hose EPICA, EVANDA</p>	<p>30062 96628961</p>  <p>Air Filter Hose CAPTIVA</p>	<p>30065 96628983</p>  <p>Air intake Hose CAPTIVA</p>	<p>30066 96940954 96548931</p>  <p>Shoch Absorber-Baggage LACETTI</p>
<p>30069 96306833 96557538</p>  <p>Shoch Absorber-Baggage NUBIRA</p>	<p>30070 96598008 96507773</p>  <p>Shoch Absorber-Baggage MATIZ</p>	<p>30071 96310381 96394240</p>  <p>Shoch Absorber-Baggage REZZO</p>	<p>30072 4808912 96661404</p>  <p>Shock Absorber-Hood CAPTIVA</p>

<p>30073 95047796 95494360</p>  <p>Shock Absorber-Baggage CAPTIVA</p>	<p>30074 96538061</p>  <p>Gear Boot KALOS</p>	<p>30075 96615460</p>  <p>Gear Boot LACETTI</p>	<p>30076 96538360</p>  <p>Hand Brake Boot KALOS</p>
<p>30077 96550315</p>  <p>Throtelle Cable CRUZE</p>	<p>30078 96830124</p>  <p>Shock Absorber-Hood CAPTIVA</p>	<p>30079 96968244</p>  <p>Radiator Braket TRAX</p>	<p>30080 94837389</p>  <p>Wheel Cap Nut LACETTI, CAPTIVA, SPARK</p>
<p>30081 94501741</p>  <p>Wheel Stud Short KALOS, AVEO</p>	<p>30082 94515412</p>  <p>Wheel Nut LACETTI, OPTRA</p>	<p>30083 94501734</p>  <p>Wheel Stud Long LACETTI, AVEO, AVEO, SPARK</p>	<p>30085 95072445 689031128</p>  <p>Air Filter Rubber CRUZE</p>
<p>65091 684223 13294212 13347449 13294212 684315</p>  <p>Engine Mounting CRUZE</p>	<p>65097 95493722</p>  <p>Gearbox Mounting AVEO</p>	<p>65119 96863981 4813836 96626330 4806307 20946939</p>  <p>Shock Absorber Mounting Front CAPTIVA</p>	<p>65135 23335486</p>  <p>Shock Absorber Mounting MALIBU</p>
<p>65176 13230774</p>  <p>Silent Arm Bush CRUZE</p>	<p>65177 13219090</p>  <p>Silent Arm Bush CRUZE</p>	<p>65203 96639351</p>  <p>Axle Shaft Boot (Outer) CAPTIVA</p>	<p>65204 93743416</p>  <p>Axle Boot (inner) CAPTIVA</p>

<p>65208 93743434</p>  <p>Bellow Steering CAPTIVA</p>	<p>65209 13278357</p>  <p>Bellow Steering CRUZE, CRUZE</p>	<p>65312 90502556</p>  <p>Oil Sump Plug AVEO, AVEO</p>	<p>65462 1338177 55577073 55577073</p>  <p>Thermostat Body CRUZE</p>
<p>65464 650170 55593189</p>  <p>Oil Filter Cover CRUZE, AVEO</p>	<p>65503 25192233 25192230</p>  <p>Thermostat Body AVEO, CRUZE, ORLANDO, TRAX</p>	<p>65584 96540939</p>  <p>Shock Absorber- Baggege KALOS, AVEO</p>	<p>930001 96273608</p>  <p>Water Distribution Hose LACETTI</p>
<p>930002 55574685</p>  <p>Water Hose (Between Thermostat And Gas Thorttle) AVEO</p>	<p>930003 96377786</p>  <p>Thermostat Hose KALOS, AVEO</p>	<p>930004 96536598</p>  <p>Radiator Lower Hose KALOS, AVEO</p>	<p>930005 96536532</p>  <p>Radiator Upper Hose KALOS, AVEO</p>
<p>930006 96536613</p>  <p>Radiator Lower Hose KALOS</p>	<p>930007 96536639</p>  <p>Radiator Upper Hose KALOS</p>	<p>930008 96536591</p>  <p>Radiator Upper Hose AVEO, KALOS</p>	<p>930009 96553249</p>  <p>Radiator Lower Hose LACETTI, OPTRA</p>
<p>930010 96553267</p>  <p>Radiator Upper Hose LACETTI, OPTRA</p>	<p>930011 96180071</p>  <p>Water Pump Hose LACETTI</p>	<p>930014 96494364</p>  <p>Radiator Lower Hose REZZO</p>	<p>930015 96391535</p>  <p>Radiator Upper Hose REZZO</p>

<p>930016 96328864</p>  <p>Radiator Upper Hose EPICA</p>	<p>930017 96536542</p>  <p>Radiator Lower Hose KALOS, AVEO</p>	<p>930018 96931201</p>  <p>Radiator inlet Hose CRUZE</p>	<p>930019 96554384</p>  <p>Heater Outlet Hose LACETTI</p>
<p>930020 96806979</p>  <p>Radiator Upper Hose AVEO</p>	<p>930021 96806980</p>  <p>Radiator Lower Hose AVEO</p>	<p>930022 95459429</p>  <p>Expansion Hose CRUZE</p>	<p>930023 96554383</p>  <p>Heating Hose input LACETTI</p>
<p>930027 96455978</p>  <p>Gas Throttle Hose KALOS, AVEO</p>	<p>930028 95950470</p>  <p>Radiator Lower Hose KALOS, AVEO</p>	<p>930029 95214144</p>  <p>Heater Hose AVEO</p>	<p>930030 95214145</p>  <p>Heater Hose AVEO</p>
<p>930031 96810843</p>  <p>Radiator Upper Hose AVEO</p>	<p>930032 95390894</p>  <p>Radiator Lower Hose CRUZE</p>	<p>930033 96467384</p>  <p>Radiator Hose AVEO</p>	<p>930034 96989978</p>  <p>Radiator Hose CAPTIVA</p>
<p>930035 95176396</p>  <p>Oil Sump Plug CAPTIVA</p>	<p>930036 4819364 95909219 95383819 95909219</p>  <p>Turbo Hose CAPTIVA, CAPTIVA</p>	<p>965049 96628979</p>  <p>Turbo Hose inlet CAPTIVA</p>	<p>965050 96628977</p>  <p>Turbo Hose Outlet CAPTIVA</p>

965275

55354563



Air Hose
CRUZE, ORLANDO, TRAX/TRACKER

965317

1336196
13251435



Radiator Lower Hose
CRUZE

965382

96629082



Radiator Lower Hose
CAPTIVA

965383

96838147



Radiator Upper Hose
CAPTIVA

965384

95194790



Fuel Recirculation Hose
CAPTIVA