




RUBBER - METAL SPARE PARTS









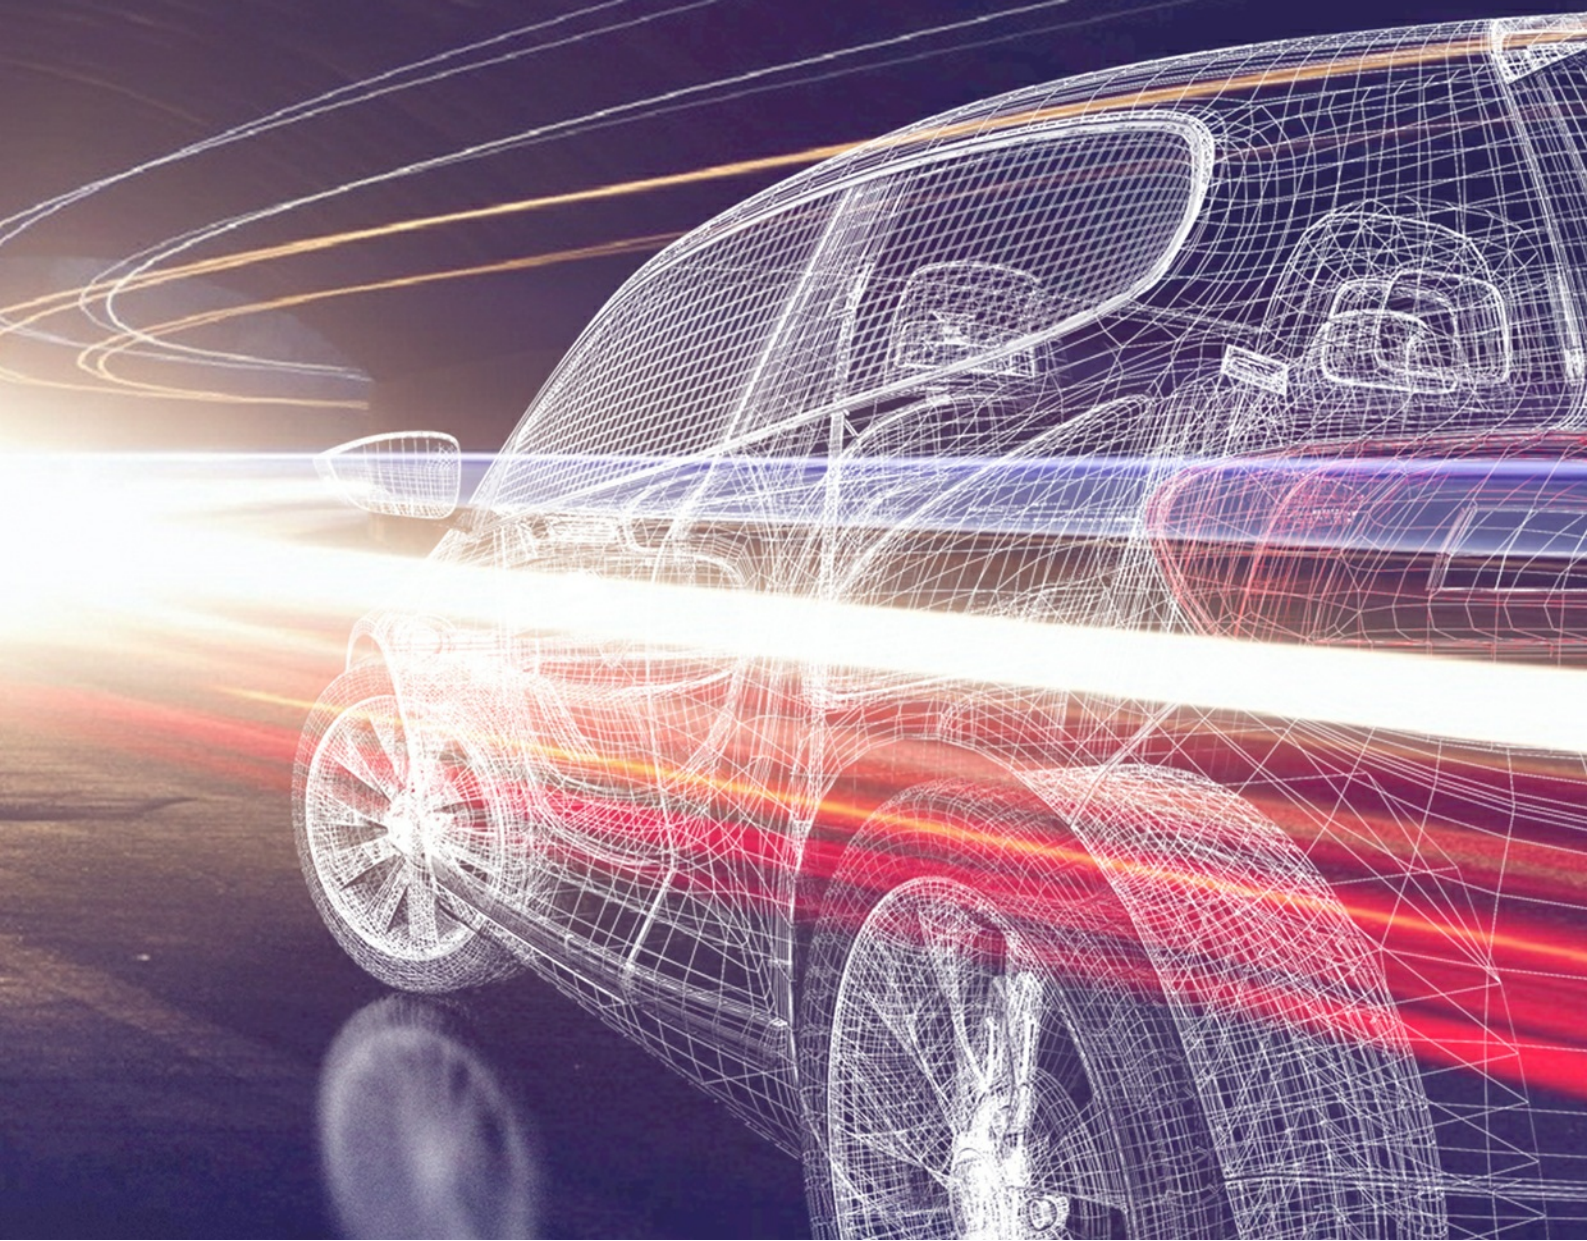











PRODUCT CATALOGUE




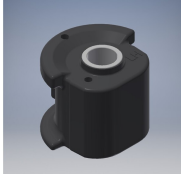






































www.rbr.com.tr





















HYUNDAI











































<p>4160</p>  <p>Control Arm Bushing ACCENT I</p>	<p>54551 22100 54551 22200</p>	<p>4161</p>  <p>Control Arm Bushing, Right Ø18 ACCENT I</p>	<p>54556 22000 54556 22100 54556 22101 54556</p>	<p>4161/1</p>  <p>Control Arm Bushing, Left Ø18 ACCENT I, EXCEL, PONY 1.3, PONY</p>	<p>54555 22000 54555 22100 54555 22101 54555</p>	<p>4162</p>  <p>Control Arm Bushing ACCENT</p>	<p>5455122100 5455122200 5455122000</p>
<p>4163</p>  <p>Control Arm Bushing ACCENT</p>	<p>5455525000</p>	<p>4164</p>  <p>Control Arm Bushing H100</p>	<p>54510 43150 MR319536</p>	<p>4165</p>  <p>Control Arm Bushing H100 Box, H100 Bus</p>	<p>5452241300</p>	<p>4166</p>  <p>Control Arm Bushing HI/STAREX</p>	<p>545224B000</p>
<p>4167</p>  <p>Control Arm Bushing i30</p>	<p>54584 2H000</p>	<p>4168</p>  <p>Control Arm Bushing i30</p>	<p>545512H000</p>	<p>42001</p>  <p>Engine Mounting ACCENT III ERA</p>	<p>21910-1G000 21910-1G050</p>	<p>42002</p>  <p>Engine Mounting ACCENT III ERA</p>	<p>21930 1G000</p>
<p>42003</p>  <p>Engine Mounting GETZ</p>	<p>21930-1C410 21930-1C130</p>	<p>42004</p>  <p>Engine Mounting ACCENT IV BLUE</p>	<p>21810 1R100</p>	<p>42005</p>  <p>Engine Mounting GETZ</p>	<p>21950 1C700</p>	<p>42006</p>  <p>Shock Absorber Powder Boot ACCENT II</p>	<p>54625 22000</p>
<p>42007</p>  <p>Shock Absorber Mounting ACCENT I</p>	<p>54610 22000</p>	<p>42008</p>  <p>Shock Absorber Mounting Back ACCENT III ERA</p>	<p>55311 1G000</p>	<p>42009</p>  <p>Shock Absorber Mounting i20, ACCENT IV BLUE</p>	<p>54611 1J000</p>	<p>42010</p>  <p>Shock Absorber Mounting ACCENT II, ACCENT I</p>	<p>54610 25000</p>




















<p>42011</p>  <p>Trailing Arm Bush ACCENT III ERA</p>	<p>62485 1G000 624851G000</p>	<p>42012</p>  <p>Suspension Mount Rear Polyurethan ACCENT III ERA</p>	<p>55326-1E000</p>	<p>42013</p>  <p>Suspension Mount Front Polyurethan i30, ACCENT III ERA, ELENTRA I,</p>	<p>54626 29100 546261G000</p>	<p>42014</p>  <p>Silent Arm Bush L ACCENT I</p>	<p>54555 22101</p>
<p>42015</p>  <p>Silent Arm Bush ACCENT II</p>	<p>54555 25000</p>	<p>42016</p>  <p>Silent Armn Bush GETZ</p>	<p>54551 25000</p>	<p>42017</p>  <p>Trailing Arm Bush Big ACCENT IV BLUE, i30</p>	<p>54584 3X000</p>	<p>42018</p>  <p>Silent Arm Bush Front Small i30, ACCENT IV BLUE</p>	<p>54551 3X000</p>
<p>42019</p>  <p>Silent Arm Bush i20</p>	<p>54584 1J000</p>	<p>42020</p>  <p>Silent Arm Bush Front Small i20</p>	<p>54551 1J000</p>	<p>42021</p>  <p>Silent Arm Bush Small 32*12*55 i30</p>	<p>54551 2H000</p>	<p>42022</p>  <p>Silent Arm Bush ACCENT III ERA, GETZ</p>	<p>54584 1C300</p>
<p>42023</p>  <p>Silent Arm Bush ACCENT III ERA, GETZ, i20</p>	<p>54551-1E000</p>	<p>42025</p>  <p>Trailing Arm Bush ACCENT I, ACCENT II</p>	<p>55116 22000</p>	<p>42026</p>  <p>Air Filter Hose H100</p>	<p>28161 43020</p>	<p>42027</p>  <p>Air Filter Hose ACCENT III ERA</p>	<p>28138 1G200</p>
<p>42028</p>  <p>Stabilizer Rubber 29 Mm STAREX</p>	<p>54813 4A001 54813 4A000</p>	<p>42029</p>  <p>Stabilizer Rubber 30,5 Mm STAREX</p>	<p>54813 4A650</p>	<p>42030</p>  <p>Stabilizer Rubber 45 Mm H100</p>	<p>54813 4A501</p>	<p>42031</p>  <p>Stabilizer Rubber 35 Mm ACCENT I</p>	<p>54813 22200</p>

<p>42032</p>  <p>Stabilizer Rubber ACCENT I</p>	<p>55513 22500</p>	<p>42033</p>  <p>Stabilizer Rubber LANTRA I</p>	<p>54813 28001</p>	<p>42034</p>  <p>Stabilizer Rubber LANTRA II</p>	<p>54813 29100</p>	<p>42035</p>  <p>Stabilizer Rubber i30</p>	<p>54813 2H000</p>
<p>42036</p>  <p>Bearing Bush Stabiliser ACCENT IV BLUE</p>	<p>54813 3X000</p>	<p>42037</p>  <p>Bearing Bush Stabiliser Front ACCENT III ERA, GETZ, i20</p>	<p>54812 1G000</p>	<p>42038</p>  <p>Axle Boot (inner) ACCENT III ERA</p>	<p>49506 1E600</p>	<p>42039</p>  <p>Axle Shaft Boot (Outer) ACCENT III ERA</p>	<p>49509 1E600</p>
<p>42040</p>  <p>Axle Shaft Boot (Outer) ACCENT I</p>	<p>87605 38260BY</p>	<p>42041</p>  <p>Axle Boot (inner) ACCENT I</p>	<p>4950428000</p>	<p>42042</p>  <p>Axle Shaft Boot (Outer) ACCENT III ERA</p>	<p>HN09LF3160</p>	<p>42043</p>  <p>Bellow Steering H100</p>	<p>56526 43001</p>
<p>42044</p>  <p>Bellow Steering SONATA IV, XG</p>	<p>57740 38000</p>	<p>42045</p>  <p>Bearing Bush Stabiliser H100</p>	<p>54751 43160</p>	<p>42046</p>  <p>Gasket Cylinder Head Cover H100, GALLOPER II</p>	<p>22442 42001</p>	<p>42047</p>  <p>Peddal Rubber ACCENT I</p>	<p>3282524000</p>
<p>42048</p>  <p>Peddal Rubber i30, STAREX, GETZ, H100</p>	<p>3282536000 32825M2000 3287037000</p>	<p>42049</p>  <p>Peddal Rubber H100</p>	<p>3286044001</p>	<p>42050</p>  <p>Suspension Mount SONATA IV</p>	<p>49511 20090</p>	<p>4218</p>  <p>Z Rot Bushing HI/STAREX</p>	<p>555304A000</p>

<p>53012</p> <p>9014605500 A9014605500</p>  <p>Bellow Steering i30</p>	<p>8509</p> <p>7701469021 4483517 4950838600</p>  <p>Outer Axle Bellows ,Thermoplastic, Kit SONATA IV, TRAJET</p>	<p>942001</p> <p>282732A601</p>  <p>Turbo Hose i30</p>	<p>942002</p> <p>282522A401</p>  <p>Turbo Hose ACCENT III ERA, GETZ</p>
<p>942003</p> <p>282742A401</p>  <p>Turbo Hose ACCENT III ERA, GETZ</p>	<p>942004</p> <p>282732A501</p>  <p>Turbo Hose GETZ</p>	<p>942005</p> <p>282732A500</p>  <p>Turbo Hose GETZ</p>	<p>942006</p> <p>282742A500</p>  <p>Turbo Hose GETZ</p>
<p>942007</p> <p>282732A700</p>  <p>Turbo Hose GETZ</p>	<p>942008</p> <p>28273 2A500</p>  <p>intercooler Hose Silicon GETZ</p>	<p>942009</p> <p>28252 2A401</p>  <p>intercooler Hose Silicon ACCENT III, GETZ</p>	<p>942010</p> <p>28275 2A400</p>  <p>intercooler Hose Silicon ACCENT III ERA</p>
<p>942011</p> <p>3133143001</p>  <p>Fuel Tank Hose H100</p>	<p>942012</p> <p>2541143001</p>  <p>Radiator Upper Hose H100</p>	<p>942013</p> <p>2541343002</p>  <p>Radiator Lower Hose H100</p>	<p>942014</p> <p>9723243001</p>  <p>Heater Hose Long H100</p>
<p>942015</p> <p>9723443000</p>  <p>Heater Hose Short H100</p>	<p>942016</p> <p>2541225100</p>  <p>Radiator Lower Hose ACCENT II</p>	<p>942017</p> <p>2541125810</p>  <p>Radiator Upper Hose ACCENT II</p>	<p>942018</p> <p>2541122010</p>  <p>Radiator Upper Hose ACCENT I</p>

<p>942019 2541222010</p>  <p>Radiator Lower Hose ACCENT I</p>	<p>942020 3133243000</p>  <p>Fuel Hose Big H100</p>	<p>942021 254111C200</p>  <p>Radiator Upper Hose GETZ</p>	<p>942022 254121C200</p>  <p>Radiator Lower Hose GETZ</p>
<p>942023 2541224010</p>  <p>Radiator Lower Hose EXCELL</p>	<p>942024 2541229100</p>  <p>Radiator Lower Hose LANTRA II</p>	<p>942025 254142H000</p>  <p>Radiator Upper Hose i30</p>	<p>942026 254120X000</p>  <p>Radiator Lower Hose i10</p>
<p>942027 254110X000</p>  <p>Radiator Upper Hose i10</p>	<p>942028 254110X200</p>  <p>Radiator Upper Hose i10</p>	<p>942029 254114P250</p>  <p>Radiator Upper Hose i20</p>	<p>942030 254114P050</p>  <p>Radiator Upper Hose i20</p>
<p>942031 254114P000</p>  <p>Radiator Upper Hose i20</p>	<p>942032 254120X200</p>  <p>Radiator Lower Hose i10</p>	<p>942033 254120X050</p>  <p>Radiator Lower Hose i10</p>	<p>942034 973210X300</p>  <p>Heater inlet Hose i10</p>
<p>942035 973210X100</p>  <p>Heater inlet Hose i10</p>	<p>942036 973110X100</p>  <p>Heater inlet Hose i10</p>	<p>942037 973110X300</p>  <p>Heater inlet Hose i10</p>	<p>942038 973111J100</p>  <p>Heater inlet Hose i20</p>

<p>942039 973111J200</p>  <p>Heater inlet Hose i20</p>	<p>942040 973111J000</p>  <p>Heater inlet Hose i20</p>	<p>942041 973121J200</p>  <p>Heater inlet Hose i20</p>	<p>942042 973121J100</p>  <p>Heater inlet Hose i20</p>
<p>942043 973121J000</p>  <p>Heater inlet Hose i20</p>	<p>942044 973112H000</p>  <p>Heater inlet Hose i30</p>	<p>942045 973112H100</p>  <p>Heater inlet Hose i30</p>	<p>942046 973122H100</p>  <p>Heater inlet Hose i30</p>
<p>942047 310362L000</p>  <p>Hose Leveling Pipe i30</p>	<p>942048 310361J000</p>  <p>Hose Leveling Pipe i20</p>	<p>942049 2671342910</p>  <p>Manifold Valve Cover Hose H100</p>	<p>942050 3748142150</p>  <p>Oil Hose H100</p>
<p>942051 3748142251</p>  <p>Oil Steam Hose H100</p>	<p>942052 2816143020</p>  <p>Air Filter Hose H100</p>	<p>942053 2842342602</p>  <p>Refrigerant Hose H100</p>	<p>942054 2541122050</p>  <p>Radiator Upper Hose ACCENT I</p>
<p>942055 2541222050</p>  <p>Radiator Lower Hose ACCENT I</p>	<p>942056 2547122010</p>  <p>Heater Hose ACCENT I</p>	<p>942057 2547226001</p>  <p>Thermostat Hose ACCENT II</p>	<p>942058 2541125000</p>  <p>Radiator Upper Hose ACCENT II</p>

<p>942059 9731025300</p>  <p>Heater inlet Hose ACCENT I</p>	<p>942060 2541225100</p>  <p>Radiator Lower Hose ACCENT II</p>	<p>942061 2546922022</p>  <p>Water Hose ACCENT I</p>	<p>942062 2672122030</p>  <p>Water Hose ACCENT I</p>
<p>942063 973101</p>  <p>Heater inlet Hose ACCENT III ERA</p>	<p>942064 973201</p>  <p>Heater inlet Hose ACCENT III ERA</p>	<p>942065 2546826101</p>  <p>Water Hose ACCENT II, ACCENT III ERA, GETZ</p>	<p>942066 2546926102</p>  <p>Water Hose ACCENT II, ACCENT III ERA, GETZ</p>
<p>942067 2.54111E+305</p>  <p>Upper Radiator Hose ACCENT III ERA, GETZ</p>	<p>942068 2 54121E+110</p>  <p>Lower Radiator Hose ACCENT III ERA, GETZ</p>	<p>942069 254111</p>  <p>Radiator Upper Hose ACCENT III ERA, GETZ</p>	<p>942070 2.54121E+305</p>  <p>Radiator Lower Hose ACCENT III ERA, GETZ</p>
<p>942071 254111C300</p>  <p>Radiator Upper Hose GETZ</p>	<p>942072 254121C300</p>  <p>Radiator Lower Hose GETZ</p>	<p>942073 254111C600</p>  <p>Radiator Upper Hose GETZ</p>	<p>942074 254121C600</p>  <p>Radiator Lower Hose GETZ</p>
<p>942075 310372L000</p>  <p>Hose Leveling Pipe i30</p>	<p>942076 28274 2A401</p>  <p>intercooler Hose Silicon ACCENT III</p>	<p>942077 31310 25000</p>  <p>injector Return Hose Poly ACCENT II</p>	